



Marshmallow Blaster™ Item # 1110 Instructions

FOR AGES 12 AND UP. 

MFC takes pride in making quality, fun toys that comply with U.S. and international safety standards.

Loading:

1. Turn the front handle and then push it forward to open the chamber.
2. Load the a regular marshmallow with the flat side facing forward (to prevent jamming) and then close the chamber and pull back to lock it into place.

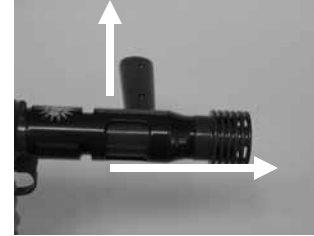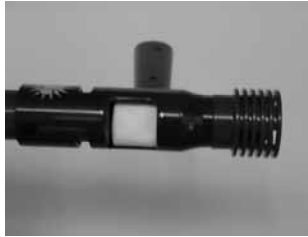

Firing:

1. Pump the Marshmallow Blaster™ 12-16 times with the black handle on the back.
2. Aim carefully.
3. Pull the trigger

BLAST MARSHMALLOWS!!

Tips & Tricks:

As fun and Novel as marshmallows are, they do have limitations as a projectile. Since marshmallows consist of only sugar and air, heat and moisture can create problems with marshmallows melting in the magazine. This problem is especially apparent in the hot summer months. There are a couple of things you can do to circumvent or at least delay the reoccurrence of marshmallow meltdown.

1. Certain marshmallow brands work better than others. Of course we recommend our *Marshmallowville Marshmallows™* which have been specially formulated for peak performance.
2. Use fresh marshmallows. The Marshmallow Blaster™ was designed not to shoot hard objects including stale marshmallows.
3. Keep your Marshmallow Blaster™ clean. A sticky or dirty barrel means the marshmallows don't fly as far or as accurately. The barrel is removable and dishwasher safe, for easy cleaning. To remove the barrel, simply press down on both of the black buttons and slide the barrel off.
4. Avoid over-pumping your Marshmallow Blaster™. You can tell it's full of pressure when the pump no longer stays in its original position. Too much pressure can cause the trigger to malfunction when it's fired. If this happens, simply tap the rear of the gun to reset the trigger.

Marshmallow Fun Company wants every customer to be a happy one:

For support or questions call toll-free 877.894.6073.

Marshmallow Fun Company
500 Orchard Pond Road, Tallahassee, Florida 32312
Toll-Free: 877.894.6073 Fax: 850.894.6073
www.marshmallowshooter.com
PATENT PENDING © 2006 MARSHMALLOW FUN COMPANY