

# Marshmallow Shooter™ Item # 1100 Instructions

## FOR AGES 8 AND UP. €€

*MFC takes pride in making quality, fun toys that comply with U.S. and international safety standards.*

### *Having Fun:*

- Gently pull the front grip of the Marshmallow Shooter™ towards the rear grip while pointing the shooter towards the ground to load a mini-marshmallow or foam pellet into the chamber. You can watch the mini-marshmallow or foam pellets move forward in the magazine, and you can see the mini-marshmallow or foam pellet in the clear barrel when properly loaded. You can control how many mini-marshmallows or foam pellets will fire by the speed you pull the front grip back.
- To shoot, swiftly push the front grip forward to launch the chambered marshmallow. Repeat the process until the magazine is empty then replace with a fresh magazine.
- If a foam pellet becomes stuck in the barrel, it has become dirty or too hard to use, and should be discarded. If mini-marshmallows get clogged in the barrel, the Marshmallow Shooter™ should be cleaned (*see cleaning instructions.*)

### *Reloading the Ammo Magazine:*

1. Removing the Marshmallow Shooter™ magazine: The Marshmallow Shooter™ uses replaceable magazines for fast reloading. To remove the magazine from the Marshmallow Shooter™, grasp the rear of the magazine above the rear grip. Pull the magazine up, away from the grip until it is free of the grip clamp, and then pull the magazine to the rear.
2. To Load the magazine with marshmallows: Fill the magazine with mini-marshmallows or foam pellets, taking care to orient the marshmallows so the flat sides are facing front and back.
3. Installing the Marshmallow Shooter™ magazines: Insert the open end of the magazine tube fully into the manifold insert. Press the rear of the magazine into the retaining clip on top of the rear grip until it snaps into place. The Marshmallow Shooter™ is now ready for fun.

### *Cleaning Instructions:*

- The Marshmallow Shooter™ is easily cleaned by placing selected parts in the dishwasher or running them under hot water until all traces of the melted marshmallows have disappeared. The barrel, manifold insert, and magazine will need cleaning in case of clogging.
- To remove the barrel, twist the barrel counter clockwise until the locking pin of the barrel is free from the retaining tab on the manifold. The barrel can then be pulled forward and free of the manifold. The manifold insert is prepared for cleaning by simply pulling it rearward out of the manifold. Running these parts through hot water for several minutes instead of dismantling the parts and putting through the dishwasher is generally much easier and faster.
- Make sure all moisture is out of the shooter before reloading with mini-marshmallows.
- Do not try to clean the barrel or magazine cap by scraping. If the interior surface of the magazine cap or barrel are scratched or damaged, future cleanings will be much more frequent.

### Marshmallow Fun Company

500 Orchard Pond Road, Tallahassee, Florida 32312

Toll-Free: 877.894.6073 Fax: 850.894.6073

[www.marshmallowshooter.com](http://www.marshmallowshooter.com)

PATENT #: US 6,904,901 B2 © 2006 MARSHMALLOW FUN COMPANY